




# Visual Land Prestige 10 Battery Replacement

This guide will teach you how to remove and replace the battery of the Visual Land Prestige 10 Tablet.

Written By: Connor Reese

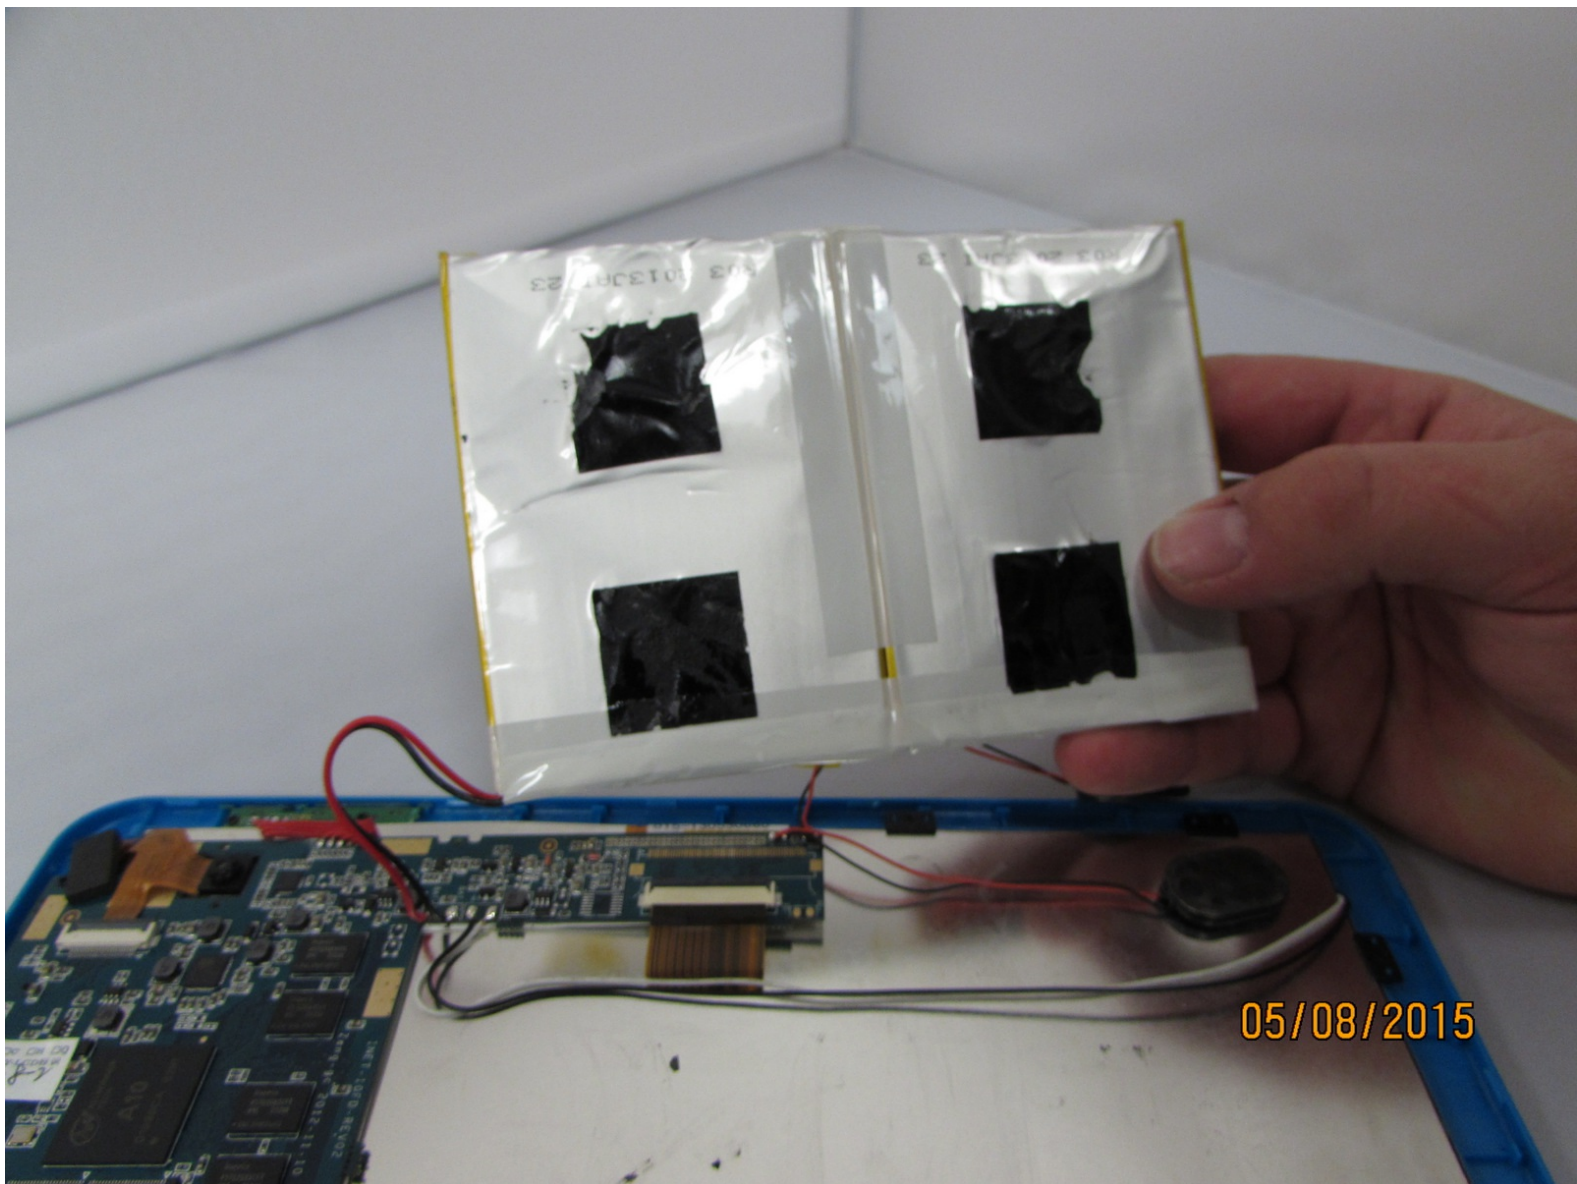




## TOOLS:

- [Magnetic Project Mat](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Soldering Station](#) (1)
-


## Step 1 — Back Case



- Remove the 3mm screws from bottom of tablet with the precision screwdriver and place on magnetic mat. label where they came from.

 All screws throughout this guide are the same 3mm size.


## Step 2

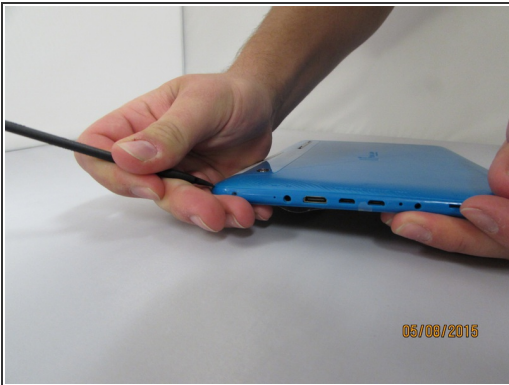

- Using the spudger, create a small opening to be used to open the back case.
- While holding the case open, insert the plastic opening tool to get a larger opening.
- Once you have a slight opening, insert the spudger and work around the edges, separating the back plate from the front.




## Step 3

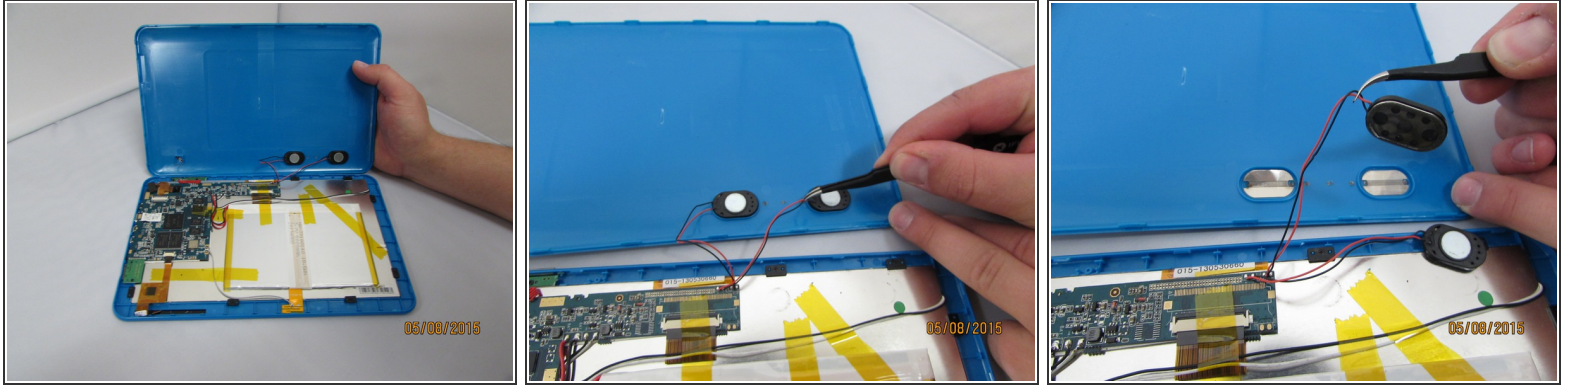




- now that the case is open, carefully remove the speakers and set aside.

## Step 4

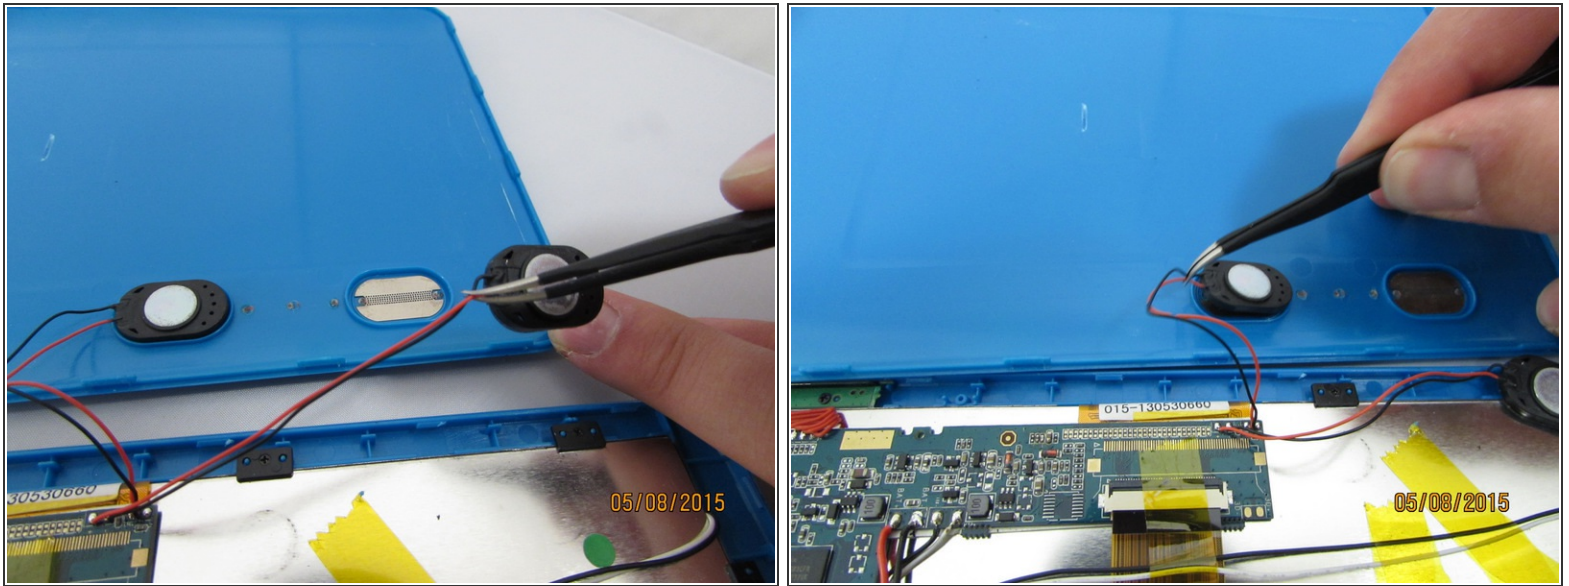



- Gently remove the speakers from the back case with tweezers and set the case aside.

## Step 5 — Battery

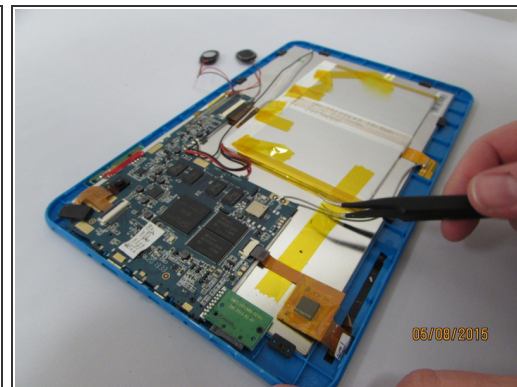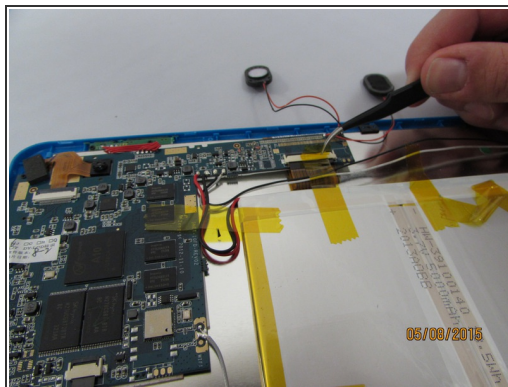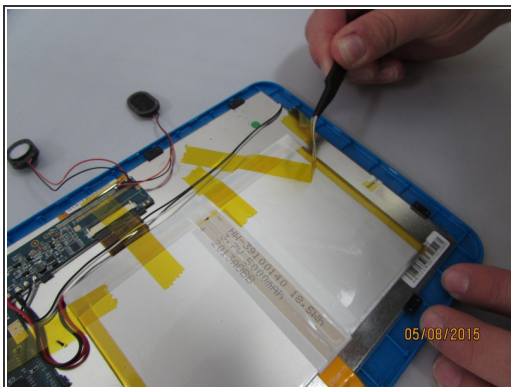

- Remove yellow tape from surrounding components.


## Step 6

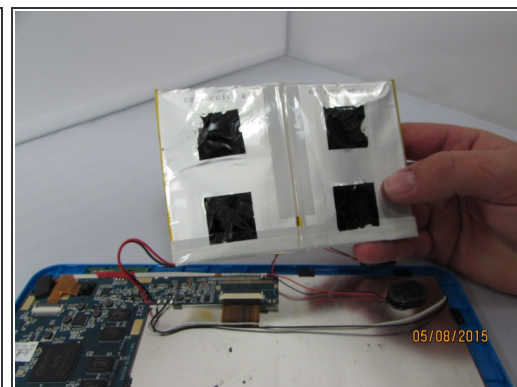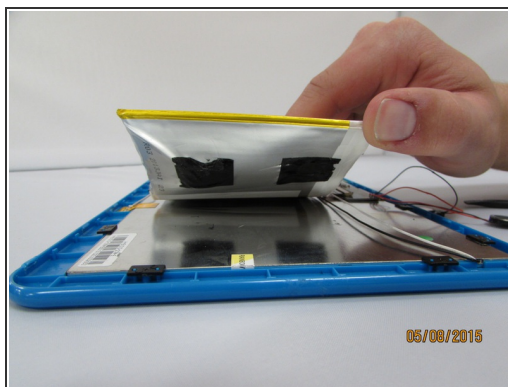

- insert the spudger and gently work around and underneath the battery.
- With the battery separated from the LCD Display, set it aside.
- ⓘ The battery is held down by very strong adhesive.



## Step 7

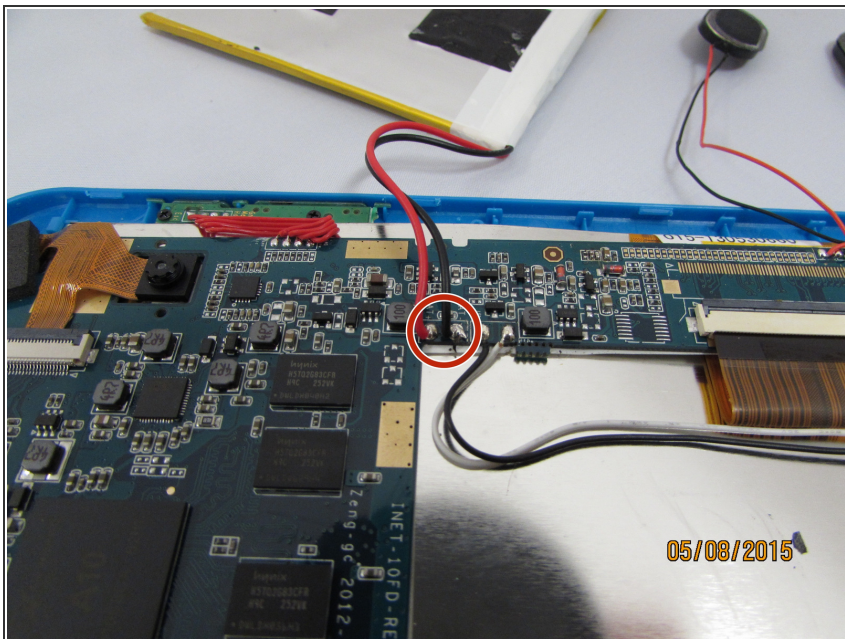

- Desolder and remove the 2 wires from the motherboard.

⚠ Use caution when desoldering to avoid damage to yourself or to the components.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 12:46:01 PM.